



# Instructions: Grass Catcher for Mascot Silent Cut 21 Deluxe Reel Mowers

	<p><b>Step One:</b> Push back support down on top of seam where the canvas and catcher bottom meet. This will support the catcher while in use. To store, slide the support out and catcher will fold flat.</p>
<p><b>Step Two:</b> Drop the front rod of the grass catcher into the hooks on the roller brackets as shown in photo.</p>	
	<p><b>Close-up of left side of catcher and roller bracket</b></p>
<p><b>Step Three:</b> Slip handle loop over handle.</p>	
	<p><b>Finished!</b> To empty grass catcher, unhook the handle loop and lift catcher up off of hooks.</p>

Copyright 2011 Reel Mowers, Etc. All rights reserved.

 <p>Reel Mowers, Etc. TM</p>	<p>PO Box 55 Grenada CA 96038 Toll Free 888 384-1033 <a href="http://www.reelmowersetc.com">www.reelmowersetc.com</a></p>
---	---